

Assembly Instructions

Mallow Pierced Pendant # PXS211

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

**NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THIS INSTRUCTION.**

For Swag Light:




1. Open the hardware package which is marked "For Swag Light".
2. Installing two ceiling hooks on ceiling. (One of them must be fastened on the edge of ceiling as Fig.1)

For plaster or plaster board ceilings (See Fig.2)

- a. Drill a 5/8" hole in the ceiling where it is to be installed.
- b. Insert the nipple into the ceiling hook.
- c. Secure the toggle bolt onto the nipple.
- d. Measure the thickness of ceiling, squeeze two flaps of toggle bolt together, and adjust the length (L) from toggle bolt to ceiling hook as you measured.
- e. Insert the toggle bolt through the drilled hole until the ceiling hook touches ceiling, then secure the ceiling hook tightly.

For wood ceilings (minimum thickness size is 3/4") (See Fig.3)

- a. Select a place on the ceiling where a wood beam exists.
 - b. Insert the dry wall screw into the ceiling hook.
 - c. Screw the assembled ceiling hook into the wood beam.
3. Thread the cord and fixture grounding wire through the "C" spider of the shade, attach the nipple of the socket to the "C" spider and secure it with the loop. (See the illustration as shown in "For Pendant" page.)
 4. Cut the fixture grounding wire near the loop.
 5. Take a certain length of chain you need, then hang the links of chain to the ceiling hooks.
 6. Thread the cord through the ceiling hooks.
 7. Insert the plug into wall receptacle, then control the lamp with the switch.

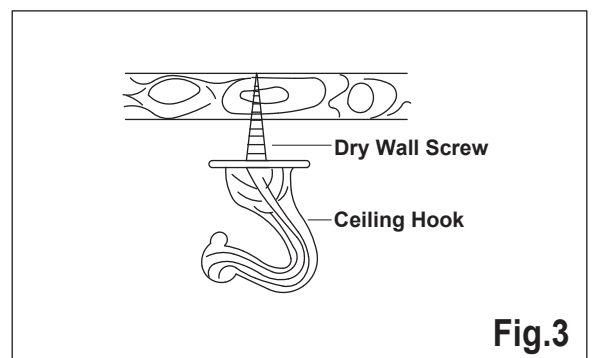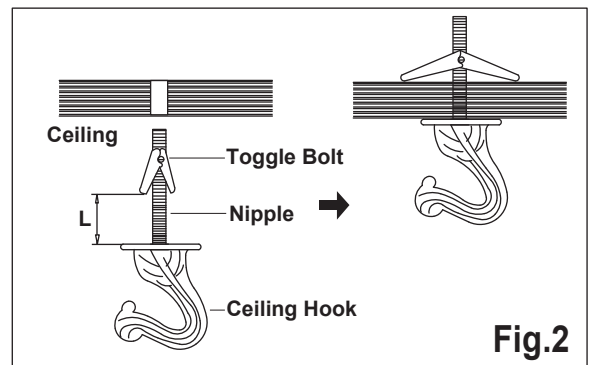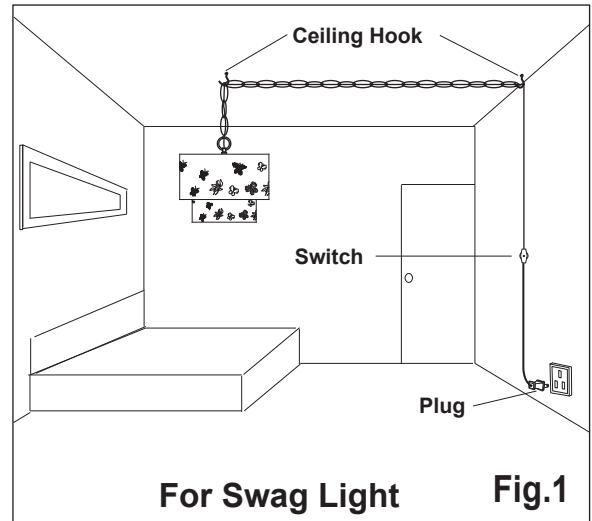

For Pendant:

1. Open the hardware package which marked "For Pendant".
2. Thread two screws through the mounting strap, then secure them with two lock nuts. Adjust the length of the screws if necessary.
3. Attach the mounting strap to the outlet box by using two mounting screws.
4. Thread the cord and fixture grounding wire through the "C" spider of the shade, attach the nipple of the socket to the "C" spider and secure it with the loop.
5. Take one loop lock, twist the locking tube open, then hook onto the loop and onto one end of the chain. Close back the locking tube of the loop lock.
6. Choose the length of the chain you need, then take another loop lock, twist the locking tube open, hook onto top end of the chain and the top loop. Close back the locking tube of the loop lock.
7. Weave the cord and the fixture grounding wire through the chain and the canopy.
8. Measure about 8" of the cord (A) from the top of the canopy, then cut off the unnecessary cord.
9. Slit the cord apart into two wires (C), about 4" from the top of the cord. Then use a knife to peel off the insulation of the two wires at about 5/8" length (B) from the top of the wires to expose the copper for wiring. (See Fig.4)
10. Pull out the outlet wires and house grounding wire from the outlet box. Make wire connections with wire nuts:
 - The smooth wire (marked) from the fixture to the black wire from the power source.
 - The ridged wire (unmarked) from the fixture to the white wire from the power source.
 - Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with the wire nut.
 Carefully put the wires back into the outlet box.
11. Attach the canopy to the mounting strap by inserting the screws, then secure it with two bolt nuts.
12. Carefully pull the inner shade downward in place from the outer shade.
13. Install a bulb (not included). Note relamping label at socket or packaging area for maximum allowed wattage.
14. Turn on the power at the main fuse or circuit breaker box.

